


ASSEMBLY INSTRUCTIONS FOR YOUR
KOLEMAN CLUB FLOOR LAMP

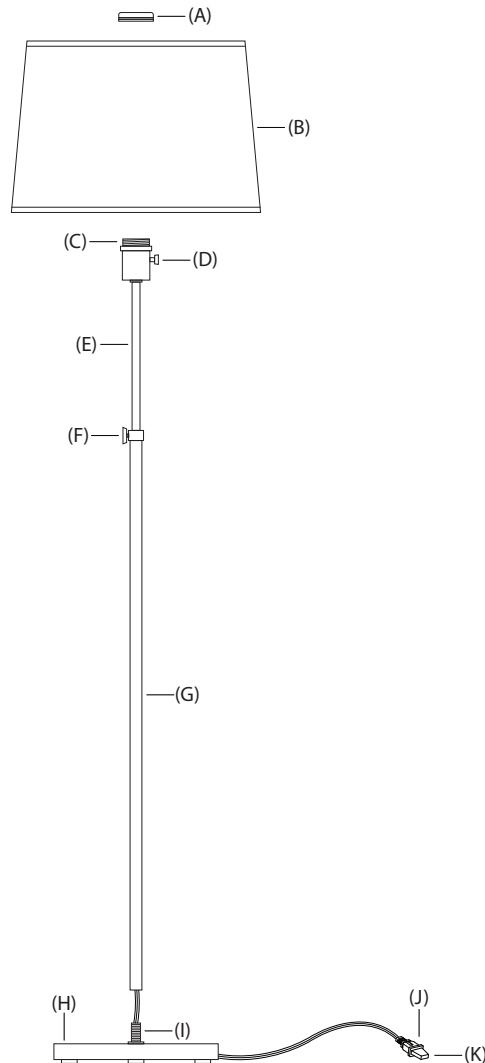

IMPORTANT SAFETY INSTRUCTIONS:

- * This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT alter the plug.
- * Do not use with an extension cord unless the plug from the lamp can be fully inserted into the extension cord receptical.
- * Switch power off and remove plug from the wall outlet before replacing the bulb.

ASSEMBLY INSTRUCTIONS:

NOTE: Do not connect electricity until lamp is fully assembled.

1. Unpack all parts and place them on a level surface.
2. Align column (G) with base (H). Pull cord taught from below base (H) to prevent damage to the wire. Thread column (G) onto threaded tube (I).
3. Remove flange (A) from threaded socket (C).
4. Place shade (B) onto threaded socket (C).
5. Thread flange (A) onto socket (C) to secure shade to fixture.
6. Install one 100W Max. Type A, medium base bulb into socket.
7. Remove protective plastic (K) from polarized plug (J). Insert polarized plug (J) into wall outlet.
8. To adjust height of lamp loosen turn knob (F). Carefully slide arm (E) into desired position. Tighten knob (F) to secure position of arm (E).
9. Use switch (D) to control power to lamp.

To clean, use a soft cloth only. Do not use any chemical or abrasive cleaners.